


Content

4 x Screw x 25mm

4 x Sleeve

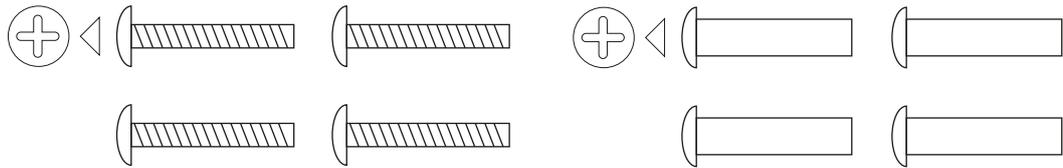

1. Mount the hinge plates.

First mount the hinge plates where they should be so that you can see which holes you should not mount the connectors in.

2. Place the frames together.


Place the frames to be joined together side by side on a flat hard surface. If you have any clamps, please use them to keep the frames in place.

3. Drill for the sleeve.

The connectors should sit as high and low as possible in the row of holes. Drill these holes with a 5mm drill bit.

4. Screw the frames together.

Fasten the screw with the sleeve through the side walls of the frames. Done!

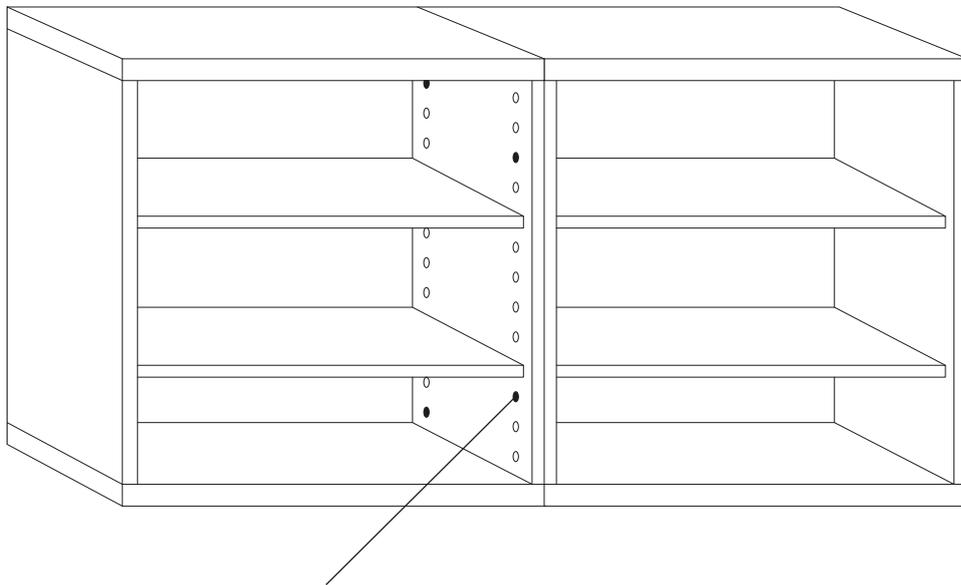

Here where the connectors normally sit. This may vary depending on the size of the frames and the placement of the hinges. Spread out the connectors as much as possible.

Safety!

Be sure to always follow the safety instructions that apply to your furniture. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the fronts open. Especially in the case of solid quality fronts as ours. Use the anchor brackets that come with the Ikea cabinet.