



Content

2 x mounting screw M4 x 20 mm

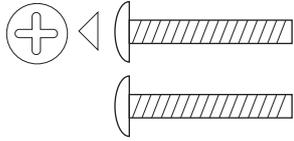


2 x Butterfly wing
(1 left + 1 right)

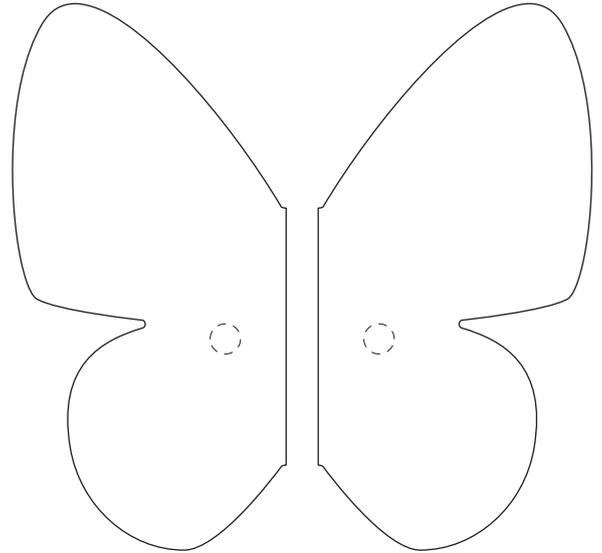


Mounting on 2 fronts

(do not use as drilling template)

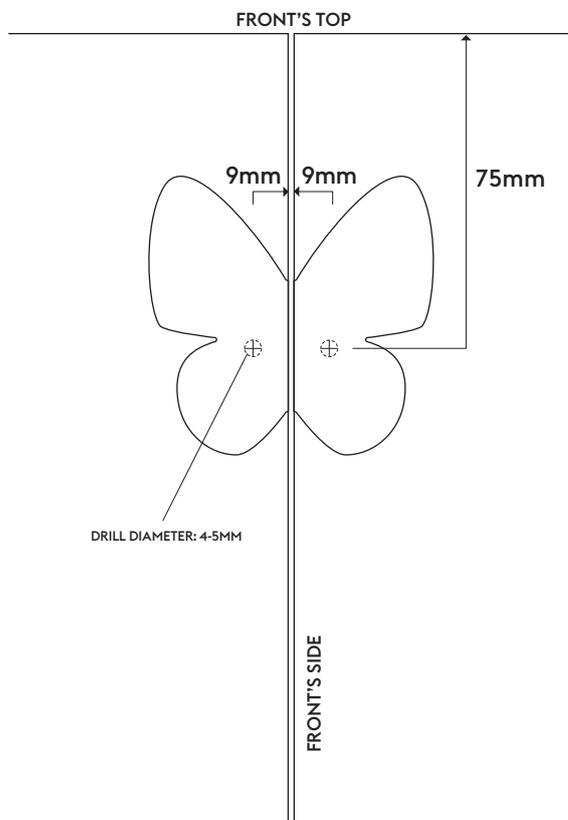

Mounting on 1 front

The distance between the center of the holes should be 18mm for the wings to come together.

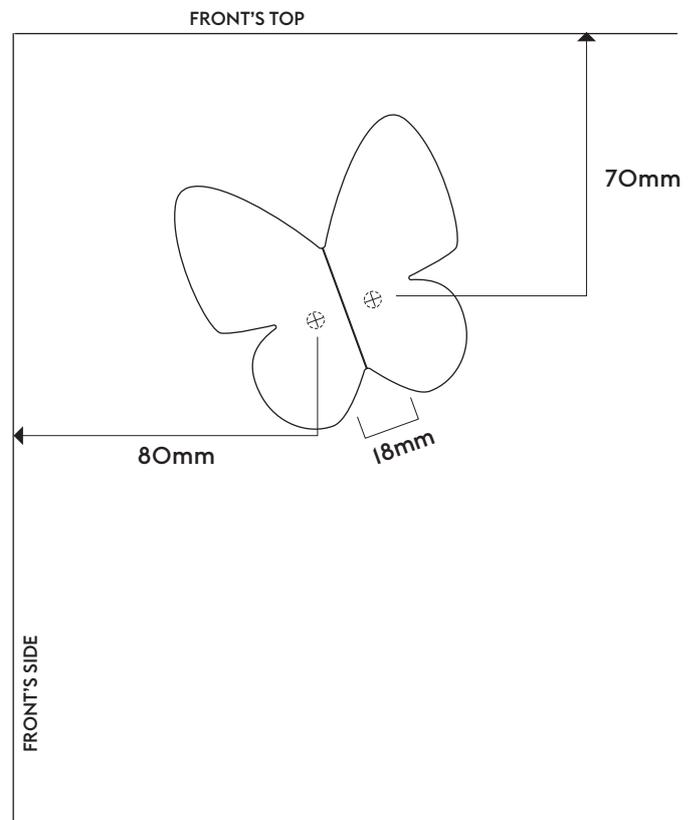

TIP! Drill the hole from the outside of the front. Hold a piece of wood tightly against the back of the front, for the drill to continue into. This will prevent the front from chipping on the back where the drill comes out.