


### Content



1 x Mounting screw M4 x 22 mm



1 x SuperWasher




1 x Pharmacy

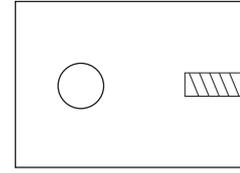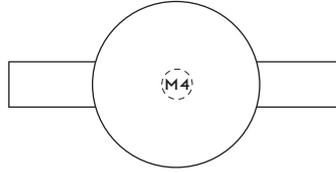


### Mounting

You can, of course, mount your Pharmacy where you want. We think it's nice to place the handle horizontally on drawers and vertically on door fronts, 45mm from the edge of the front.

**TIP!** Drill the hole from the outside of the front. Hold a piece of wood tightly against the back of the front, for the drill to continue into. This will prevent the front from chipping on the back where the drill comes out.



DRAWER FRONT



DOOR FRONT

### Mounting guide

(do not use as drilling template)

