



Content


2 x Mounting screw M4 x 22 mm

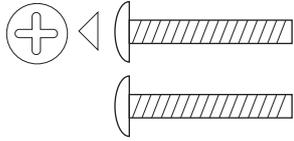

1 x Swell

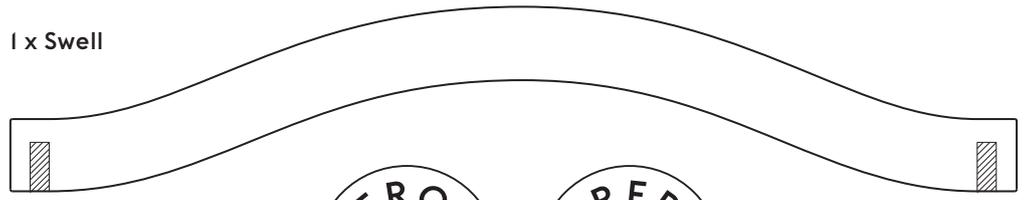

2 x SuperWasher

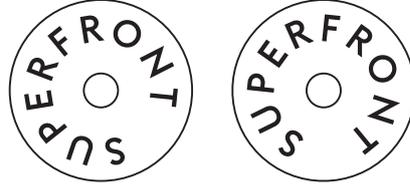

Mounting

The distance between the center of the holes should be 192mm.

You can, of course, mount your Swell wherever you want. We think it's nice to place the handle 40mm from the edge of the front.

TIP! Drill the hole from the outside of the front. Hold a piece of wood tightly against the back of the front, for the drill to continue into. This will prevent the front from chipping on the back where the drill comes out.

Drilling guide

(do not use as drilling template)

