



Content

4 x screw 17mm
Suitable for mounting on Metod or Bestå.
For mounting on other furniture, see below.

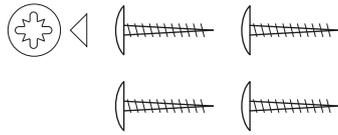

1 x M8-screw



Leg




Mounting on Ikea frames

Mounting Twine Low on an Ikea cabinet differs slightly from frame to frame. See descriptions below. **NOTE!** You don't need to use all of your extraterrestrial strength for this task. Do it with a firm hand - but not rock hard.


Ikea Metod

It's very important to mount Twine Low so that the side piece rests on the small rabbet that runs along the mounting plate. Mount the leg with the four supplied wood screws.

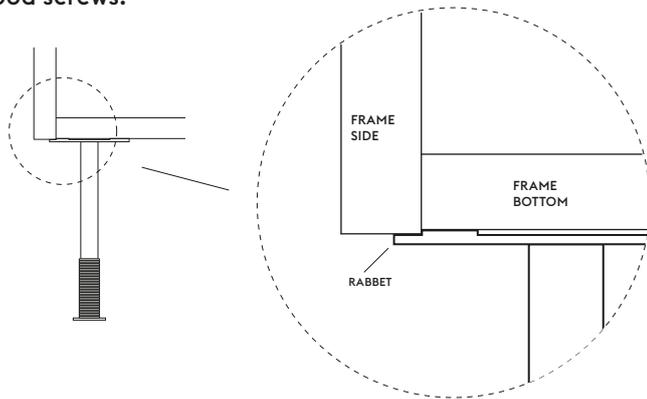

In the joint between 2 Ikea Metod frames


When placing Twine Low between two frames, the frames' side pieces should rest in the leg rabbet. Attach the leg with the four supplied wood screws.

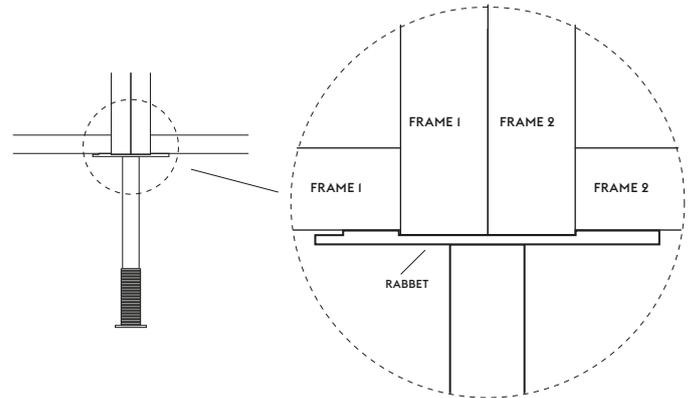

Ikea Bestå

Mount Twine Low with the M8 screw in the existing screw hole located in all four corners under the Ikea Bestå frame. Secure with the supplied wood screws.

If the leg is mounted in the middle of a 180 cm wide Bestå frame or in the joint between two Bestå frames, use the supplied wood screws only.

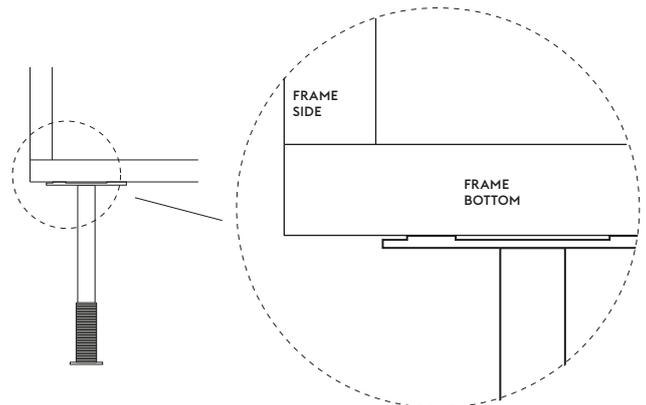

Mounting on other furniture

For mounting on other furniture than Ikea cabinet frames, you are responsible for using suitable screws. It's important that you ensure that the screws are long enough and that they get firmly attached. **NOTE!** Make sure that the screws do not end up too close to the edge of the frame / bottom plate.

Safety!

Be sure to always follow the safety instructions that apply to your furniture. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the fronts open. Especially in the case of solid quality fronts as ours. Use the anchor brackets supplied with the Ikea cabinet.