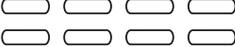
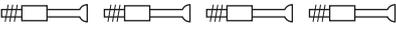



Content





8 x Wooden dowel 

4 x Cam-bolt 

4 x Cam-lock 

4 x Angle 

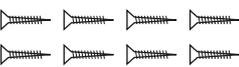8 x Wood screw 

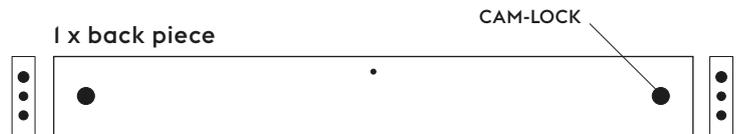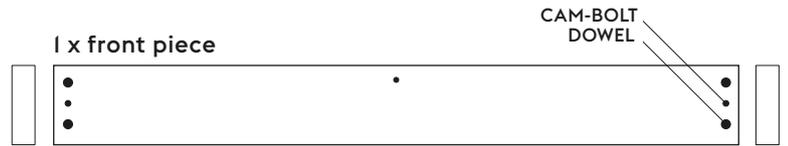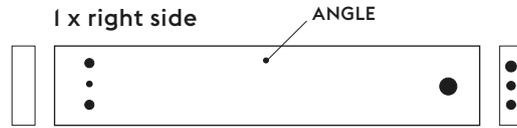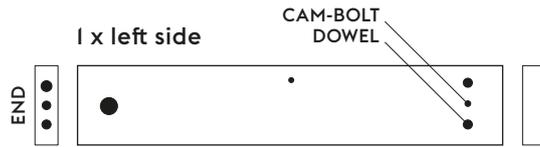

Mounting

1. Insert the wooden dowels where they belong: 2 in each side piece and 4 in the front piece. Screw the cam-bolts in the smaller holes between the dowels.


2. Put the side pieces and the back piece together.

3. Place the cam-locks in their holes and rotate until they lock the bolts.

4. Now put the front piece and the side pieces together and secure with cam-locks.

5. Attach the angles to your Plinth using wood screws and then screw it to the bottom of the cabinet.

NOTE! If you are installing your Plinth under a Metod cabinet - make sure that the Plinth is mounted so that it protrudes about 1 cm behind the frame (aligning with the back edges of the Superfront sides).

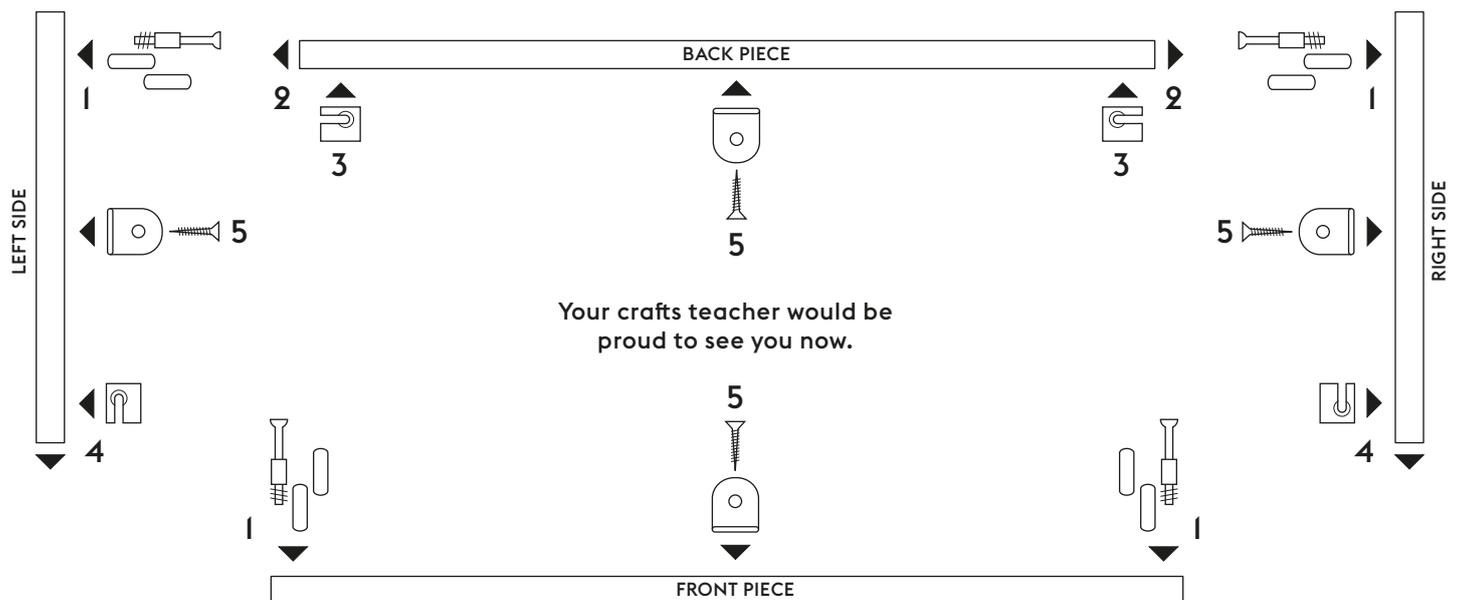

Safety!

Be sure to always follow the safety instructions that apply to your furniture. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the fronts open. Especially in the case of solid quality fronts as ours. Use the anchor brackets supplied with the Ikea cabinet.